



Roof *Airtight on the inside*

Mounting vapour control layer for above-rafter insulation



- Apply Majrex 200 with the unprinted side facing towards you
- Overlap membranes by approx. 10 cm, fix in place with Twinet 20 and additionally with a stapler if required




- Seal overlaps and penetrations airtight using Wigluv 60
- Not suitable for makeshift coverage/ construction coverage





How it should look:

- Majrex 200 for above-rafter insulation

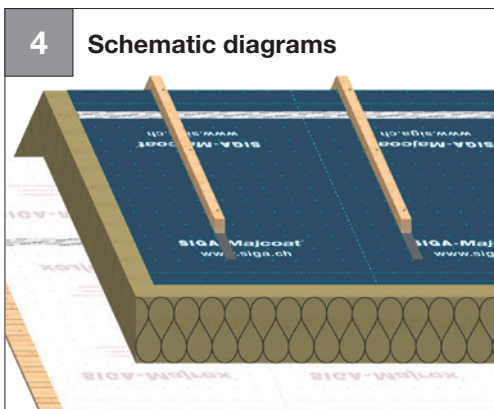

Roof

Airtight on the inside

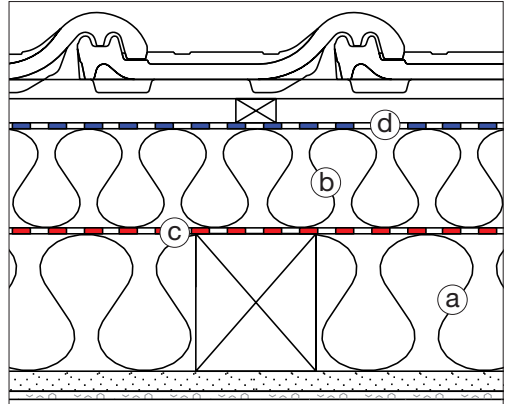

Above-rafter insulation with Majpell 5:
 • Lay **Majpell 5** with the smooth side and the writing facing you

- (a) Thermal insulation between joists
- (b) Covering insulation \geq thermal insulation between joists
- (c) Majrex 200 / Majpell 5
- (d) Optional Majcoat 150 & Majcoat 150 SOB / Majcoat 200 SOB / Majcoat 250 SOB / Majcoat 350



Majrex® 200

P. 115

Majpell® 5

P. 116

Wigluv® 60

P. 128