

# PROROLL

## **ROLLER APPLIED PLASTERS**


Ideal for smoothing textured finishes and plasterboard backgrounds. All you need is a 9 inch medium pile paint roller and a medium length spatula for a perfect finish.



- Surface levelling of existing internal walls and ceilings
- Up to 2mm/coat, max 4mm in multiple coats

### Tools required...

- 9 inch medium pile paint roller
- Medium length spatula

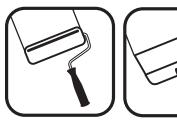

### **PROROLL LIGHT**



- Use directly onto plasterboard or on ProRoll Max for a superior finish
- Up to 1mm/coat, max 3mm in multiple coats



# PROROLL

## **ROLLER APPLIED PLASTERS**

#### Ready-mixed Easy to sand Quick drying



#### Application & Installation

All substrates must be stable, dry, even and free from grease and dust. Cover furniture and floor coverings before commencement. Repair large cracks with a gypsum filler/plaster and allow to fully dry. Repaired areas should not be smoothed to allow for adhesion. Stir the material before application if necessary.

Load a 9 inch medium pile paint roller directly from the tub. Apply an even coating to the surface, working about 1m<sup>2</sup> at a time. Work methodically, applying wet on wet product.\*

\* Please note that for refurbishments in older buildings, checks should be carried out to ensure that textured/ plasterboard ceilings are able to support the additional weight.



On textured backgrounds, apply Knauf ProRoll Max at a maximum of 2mm per coat, allowing each coat 12 - 18 hours to dry. Two coats of Knauf ProRoll Max can be applied if required, followed by a 1mm coat of Knauf ProRoll Light to finish. On smooth backgrounds, just Knauf ProRoll Light is required in coats of 1mm up to a maximum of 3mm.



When product is slightly tacky, smooth over with a medium length spatula.

