



FIXING INSTRUCTIONS

Versa-Tile G5 Roof Ventilator / Terminal

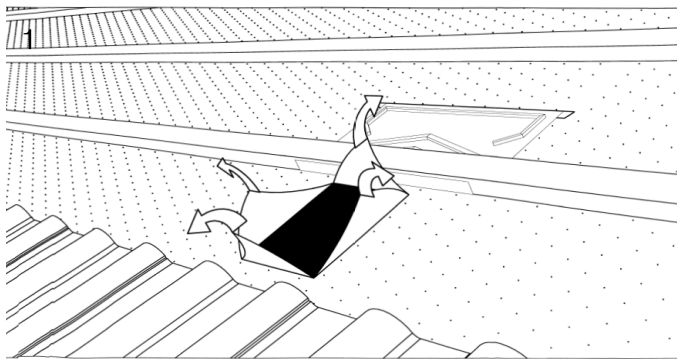


1 – Decide on a suitable position for the Glidevale Protect Versa-Tile G5 Ventilator between rafters and tiling battens.

Lay tiles up to the course below this position. Cut an X in the underlay and fold the flaps upwards and outwards. Make a slit in the underlay above the tile batten, slide the underlay protector under the batten and into the slit until the upstand of the underlay protector is against the back of the batten.

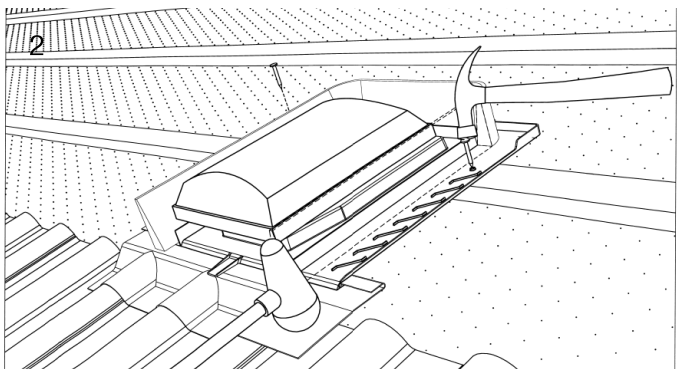


2 – If an extension sleeve or pipe adaptor are being used, snap fit these to the Versa-Tile G5 before fixing. Fit the Versa-Tile G5 in position and nail to the batten.

For profiled tiles, ensure the roof covering is clean, dry and dust free. Remove the protective backing and dress the front Glidevale Protect AluFlash apron onto the tiles below to ensure a weatherproof junction.

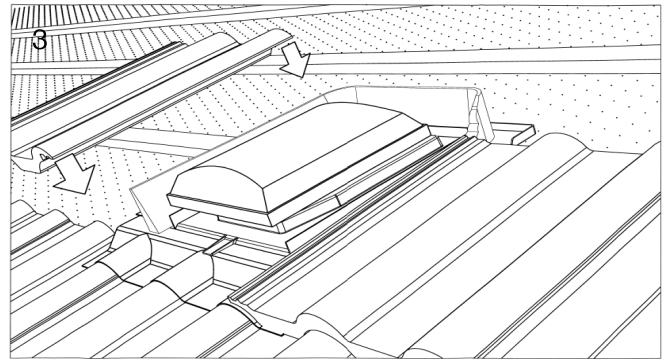

3 – Lay the next course of tiles, overlapping the Versa-Tile G5 on each side and compressing the foam filler. It may be necessary to remove adjacent tile nibs to prevent tiles “kicking-up”. Screw down adjacent tiles where necessary.

Any tile needing to be cut along their length should be done such that their cut edge sits just outside the upstands/weather bars running up the Versa-Tile G5 Ventilator.

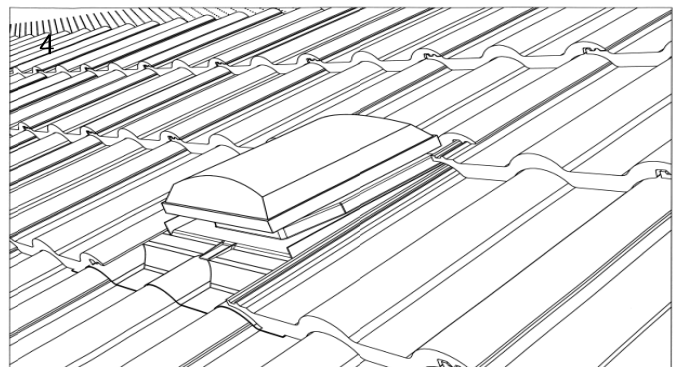


4 – Continue tiling in the normal way. When positioning the tile directly behind the vent, the front edge of the tile must butt up to the back of the cowl of the vent.

SUITABLE FOR ROOF PITCHES OF BETWEEN 20° AND 60°.

FOR PITCHES ABOVE OR BELOW THIS CONSULT GLIDEVALE PROTECT TECHNICAL SERVICES.
 COMPANY NAMES AND PRODUCT DESCRIPTIONS ARE THE REGISTERED TRADE MARKS OF THE
 RELEVANT MANUFACTURER

Got everything you need?

If adapting to a soil ventilation pipe terminal, you will also require a Glidevale Protect GV110 pipe adaptor and flexible pipe. If adapting into a mechanical extract terminal you will need the Glidevale Protect GV110 pipe adaptor. Supplied separately, the GV110 pipe adaptor snap-fits to the ventilator and connects to the Glidevale Protect Flexi Pipe to ensure an airtight connection complying with Building Regulations Approved Document H.

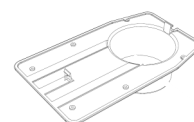

GV110 pipe adaptor



Flexi Pipe

To view these options and other Glidevale Protect products, visit www.glidevale.com.

GLIDEVALE PROTECT

2 Brooklands Road, Sale, Cheshire, M33 3SS

Telephone (+44) 0161 905 5700 Fax (+44) 0161 905 2085 Web: www.glidevale.com www.protectmembranes.com Email: technical@glidevaleprotect.com



A division of Building Product Design Ltd